

Automatic Pure Water Fill Arm

designed to allow your personnel to move on to other work while filling containers, without the worry of spillage.

The Automatic Fill Arm employs a reliable proximity switch to sense water level. The level is adjustable at two places, making it easy to set-up for different sized containers.

To initiate the foolproof filling procedure, the operator moves the container into position under the fill arm and presses the reset button. When the water level reaches the set height, the solenoid valve closes, shutting off the water to the fill arm. An audible and visual alarm alerts the operator that the fill cycle is complete. The alarm is silenced by a second push button.



- UL Listed Components
- Wall-mounted polyurethane-coated panel
- 10 - 90 degree angle design for different sized containers
- Arm extends to 18"
- 120 v 1 ph 1 amp
- 2' x 2' panel



A 34 - 8/04

Service and Supplies

CORPORATE OFFICES:

PO BOX 12197, Research Triangle Park, NC 27709

800.950.7426

www.hydroservice.com

DIVISION OFFICES:

Raleigh/Durham, NC
Rockville, MD
Pennsylvania

919.361.5188
301.770.2120
215.547.0332

New Jersey
Massachusetts
Connecticut

973.926.0203
781.337.1203
203.265.3995